 


Upper Light Batten : 4CH. 1:8 / RD 없음, DMX PORT 없음



#3 Sus : 18CH. 1:1 / RD 2ea 1:2 / 끝 쪽 RD 옆에 DMX PORT



 
#2 Sus : 18CH. 1:1 / RD 2ea 1:2 / 끝 쪽 RD 옆에 DMX PORT




#1 Sus : 18CH. 1:1 / RD 2ea 1:2 / 끝 쪽 RD 옆에 DMX PORT




#1 CATWALK : 12CH. 1:1 / RD 2ea 1:2 / 끝 쪽 RD 옆에 DMX PORT




#2 CATWALK : 24CH. 1:1 / RD 4ea 1:2 / 끝 쪽 RD 옆에 DMX PORT/Direct 2ea

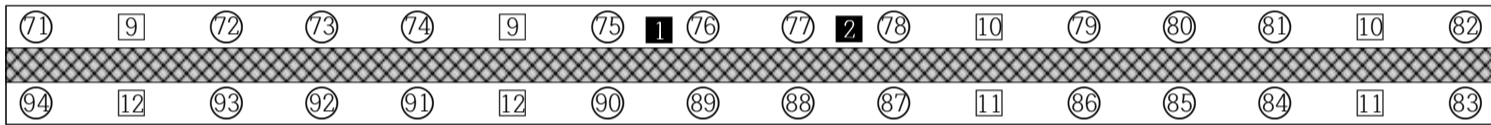


#3 CATWALK : 24CH. 1:1 / RD 4ea 1:2 / 끝 쪽 RD 옆에 DMX PORT/Direct 2ea

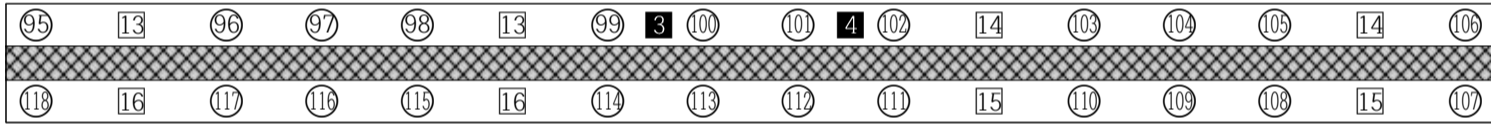


#4 CATWALK : 12CH. 1:1 / RD 2ea 1:2 / 끝 쪽 RD 옆에 DMX PORT/Direct 2ea

 


#1 Stage Wall Panel :  
12CH. 1:1 / RD 2ea 1:1 /  
판넬 아래에 DMX PORT

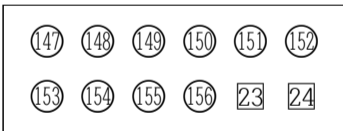


#2 Stage Wall Panel : 동일

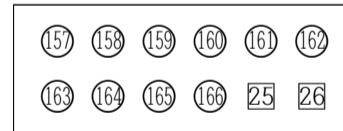

#3 Stage Wall Panel : 동일

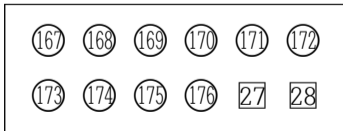

#4 Stage Wall Panel : 동일

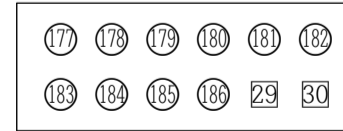

Right Side Batten : 8CH. 1:1 /RD 2ea 1:2 / 끝 쪽 RD 옆에 DMX PORT



Left Side Batten : 동일

